

# User Guide

# Deblisterer 1110

Operation & Service



**USER GUIDE**

is available on  
our website @

**[www.rxsystems.com](http://www.rxsystems.com)**



121 Point West Blvd.  
St. Charles, MO 63301

**1-800-922-9142**

**Fax 1-636-925-0041**

**[tsr@rxsystems.com](mailto:tsr@rxsystems.com)**

**[www.rxsystems.com](http://www.rxsystems.com)**

# Table of Contents

- 1 Introduction ..... 1
- 2 Specifications, Features & Accessories ..... 2
  - 2.1 Specifications ..... 2
  - 2.2 Features..... 2
  - 2.3 Accessories..... 2
- 3 Deblisterer Setup and Operation..... 3
- 4 Deblisterer Material Description..... 4
- 5 Punch Plate Diagram..... 5
- 6 Maintenance ..... 6
- 7 One Year Warranty ..... 6

# 1 Introduction

Rx Systems, Inc. is very pleased you decided to join the growing number of Deblisterer owners.

Operating the Deblisterer, you will appreciate the basic but efficient design of quality components. With proper care and maintenance you can expect years of trouble free service.

This User Guide will make you familiar with the features, operating principals, procedures, necessary maintenance and troubleshooting of the Rx Systems Deblisterer.

**Note: Please keep all packaging materials. REPLACEMENT PACKAGING is EXPENSIVE and REQUIRED for shipping.**

## 2 Specifications, Features & Accessories

### 2.1 Specifications

Overall Dimensions:

Closed: 23" x 9.5" x 6.5"

Open: 23" x 9.5" x 23.75"

Weight: 15 lbs.

### 2.2 Features

- Unique design allows fast and easy pill removal from pill cards.
- Works with 30, 31, 32, 60, 62 count cards with large or small blisters.

### 2.3 Accessories

- Catch Tray (included)
- Punch Plates (not included)
  - UNI-30, 31, 32 count large
  - UNI-30, 31, 32 count small
  - UNI-60, 62, 90 count
  - M-30, 31, 32 count large
  - M-30, 31, 32 count small
  - M-60, 62, 90 count
  - OP 16 count

## 3 Deblisterer Setup and Operation

- Ensure there are the correct number of tabs on the punch plate for the type of cards you are using.
  - EX: To punch out a 30 count card you only want 30 tabs (not 31).
- Place punch plate into receptacle plate
- Insert plates into deblisterer
- Use thumb screws to mount the plates to the deblisterer
- Slide catch tray into deblisterer
- Open deblisterer and insert prepack card (face up, bottom first)
- Close deblisterer
- Remove catch tray


**NOTE:** A helpful VIDEO can be found here: <http://youtu.be/jdv32F4uHLE>

## 4 Deblisterer Material Description





## 5 Punch Plate Diagram

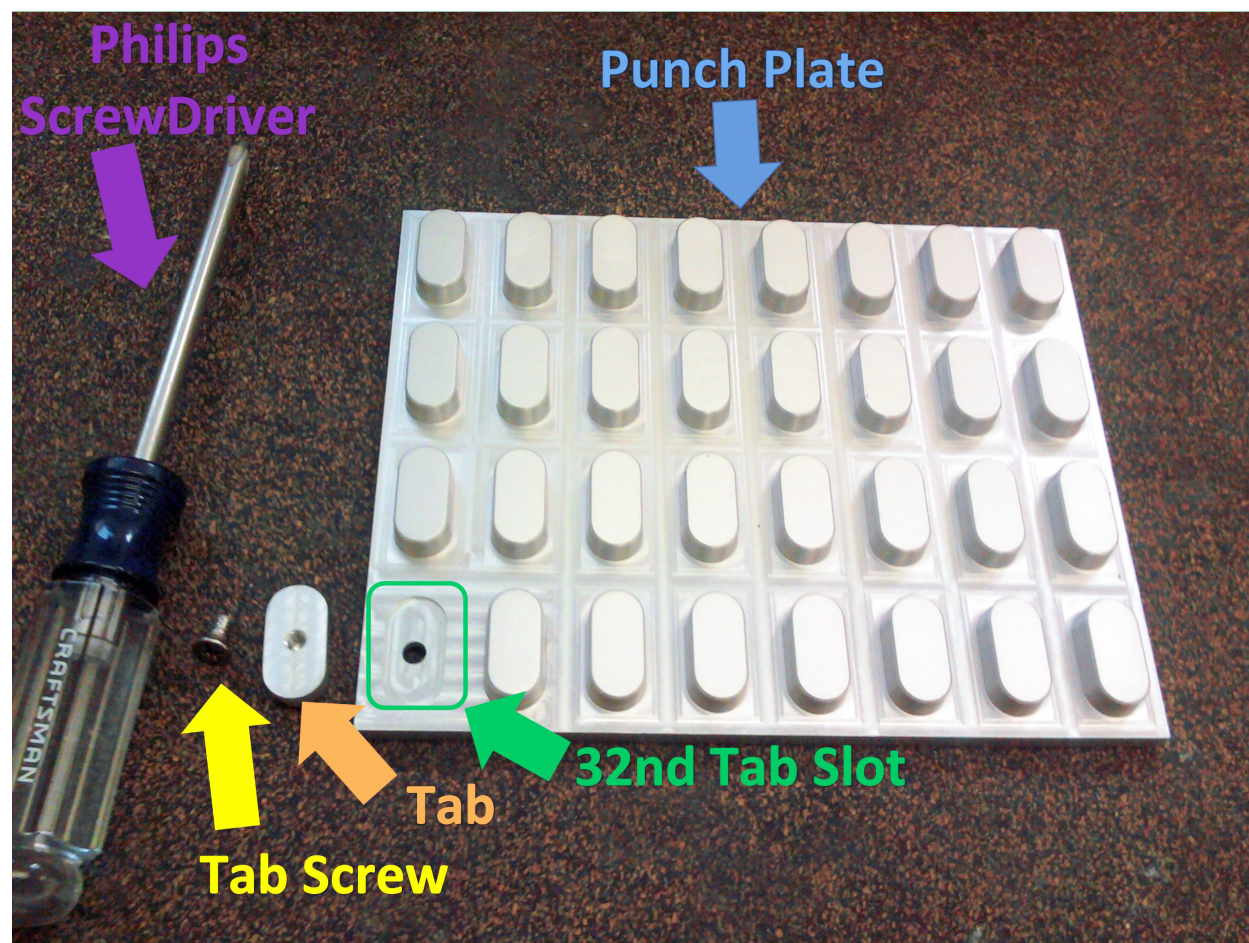

## 6 Maintenance

The plates and the catch tray can all be cleaned with warm water and soap after each medication.

Beyond keeping the Deblisterer clean, no other maintenance should be required.

## 7 One Year Warranty

Rx Systems warrants its Deblisterer for one year from the original date of purchase. The warranty covers defects in material and workmanship. Within the applicable warranty period, the Deblisterer will be repaired or replaced at Rx Systems discretion.

Voided Warranty: In the event an Deblisterer is returned for warranty work and is ***improperly packaged, the warranty may be voided.*** If you need proper packaging, please call Rx Systems, it is available at a cost and required for shipping..

The information contained herein is based upon our research and believed to be accurate, but the accuracy and completeness of our recommendations is not guaranteed. The user shall determine the suitability of the product for their intended use before using the product and the user assumes all risk and liability whatsoever in connection with the use of the product. **Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or inability to use the product.** The following is made in lieu of all warranties, express or implied: Seller's and Manufacturer's only obligation shall be to repair, replace or credit such quantity of the product proved to be defective.